




Fusion Series: FLARE

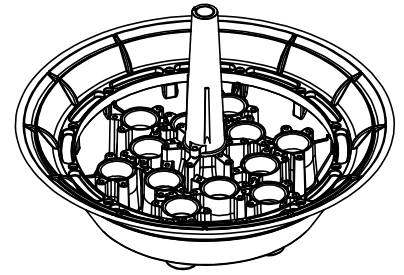

Parts Needed:

- Nozzle base x 1
- .6 Nozzle Tip x 1
- Flow Stopper x 12
- Rubber Plug x 1
- 1x Flare Attachment (already installed)
- Bolt x 1
- Screw x 26
- 1.25 OD Washer x 11

1. Attach Flare to Nozzle Base:

Remove the Flare (which is shipped upside down), flip it as shown and secure with 12 x screws

2. Install Flow Stoppers to the Nozzle Base:

Insert 12x Flow Stoppers into the bottom of the Nozzle Base, secure with 12x screws

3. Attach the Nozzle Base

Stack 11 Washers in the cup of the Outflow

Secure the Nozzle Base to the unit using the bolt that goes through the center hole

Finally secure the Center (.6) Nozzle Tip with the plug inserted to the Nozzle base using 2x screws

Make sure Rubber Plug is inserted into the bottom of the .6 Nozzle Tip