





# Fusion Series: TORNADO

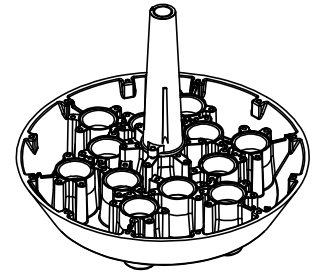


## Parts Needed:

Nozzle Base  
x 1

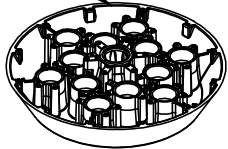

Bolt  
x1

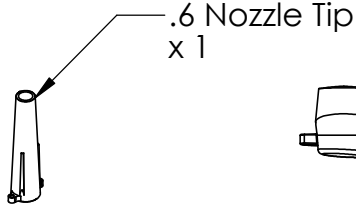

.6 Nozzle Tip  
x 1



Flow Stopper x12



Rubber  
Plug x1




Screw  
x14

1.25 OD Washer  
x11



## 1. Remove Flare from Nozzle Base:

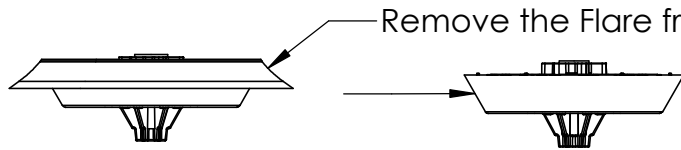


Remove the Flare from the Nozzle base, set aside.

(Save for use with other patterns)


## 2. Install Flow Stoppers to the Nozzle Base:

Insert 12x Flow Stoppers into the bottom of the Nozzle Base, secure with 12x screws

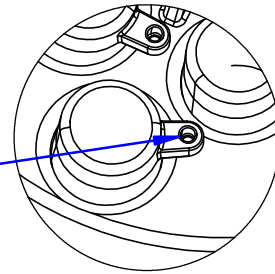


## 3. Attach the Nozzle Base

Stack 11 Washers in the cup of the Outflow

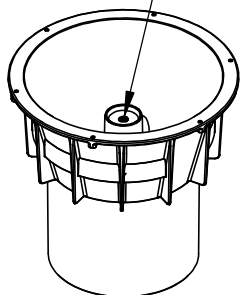

Secure the Nozzle Base to the unit using the bolt that goes through the center hole

Finally secure the Center (.6) Nozzle Tip with the plug inserted to the Nozzle base using 2x screws

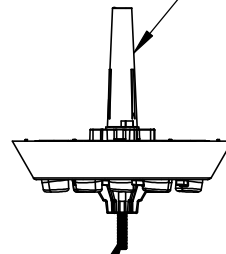

Make sure Rubber Plug is inserted into the bottom of the .6 Nozzle Tip

